

Omni 2 – Sedeo Lite

Retro Fitting Help Guide





Parts Required:

Electronics

Omni 2 Kit – 20011242 (includes Input Section, Display Screen, 250cm connecting cable)

Bag Mounting

- Backpack 20009190-010
- R-Net Bus. Cable 20011035
- Fixing Bracket 22809099

Joystick Mounting (Left and Right)

- JSM Swing Away Mount 20009252
- JSM Fixed Mount 20009251



Parts Required:











Step 1

• Open the Omni 2 backpack so you can see the holes in the metal plate inside.





Step 2

• Use a drill with a 5mm bit to drill holes through the fabric






Step 3

• Drill the holes in positions shown below.







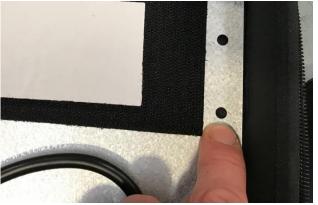



Step 4

• Remove headrest bracket. 4 screws using a Philips screwdriver.









Step 5

Fit the Omni bag bracket then fix in place with the headrest bracket on top.






Step 6

• Use a Philips head screwdriver to fix in place.





Step 7

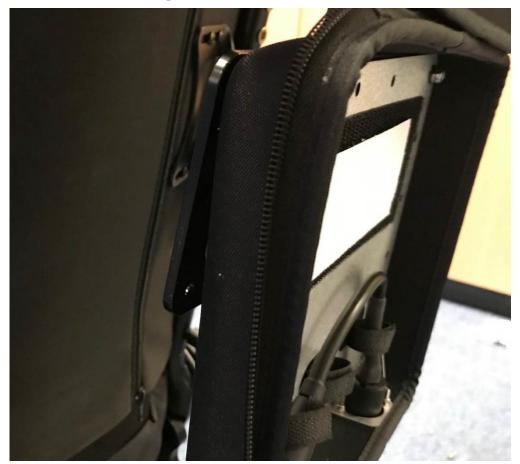




Step 7 cont.....





Step 7 cont.....

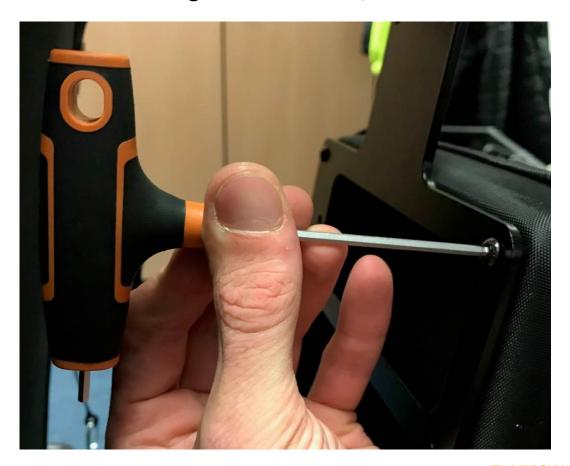




Step 7 cont.....





Step 7 cont.....

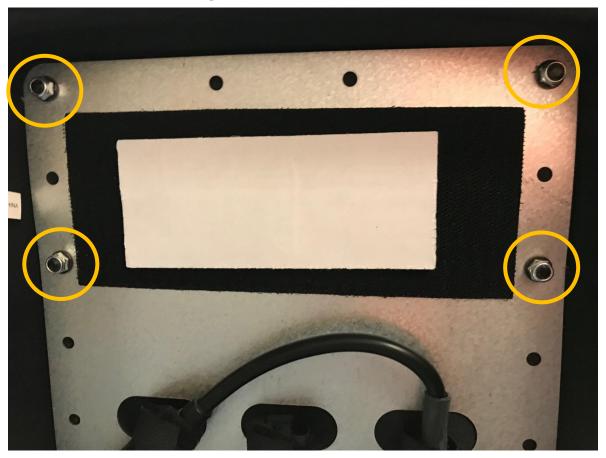



Step 7 cont.....





Step 8

Now take the Input Module for the Omni 2.





Step 9

• Remove Velcro pad from inside the Omni 2 backpack.





Step 10

Peel off the back of the Velcro pad and stick to the back of the Input Module.





Step 11

 Connect the charging port inside the backpack to the yellow charging connector on the Input section.





Step 12

Fix the Input Module to the Velcro pad inside the backpack.





Step 12 cont.....

Fix the Input Module to the Velcro pad inside the backpack.






Step 13

Now take the 90 degree R-Net Bus. cable and connect to the Bus. port on the left

side of the Input Module.



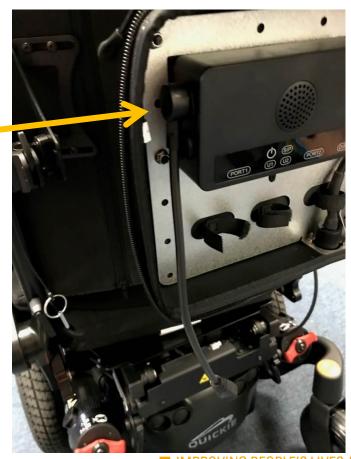



Step 14

• Now take the Omni 2 display screen. Turn over so you can see the brass sockets.







Step 15

• Fix the adapter bracket to the Omni 2 with 2 small screws.





Step 16

Take the Omni mounting bracket (Fixed or Swing away). Remove the standard

joystick mounting bracket.







Step 17

Fix the Omni 2 mounting piece to the swing away mount. Secure with fixing bolt.





Step 18

Fit 2 channel nuts to the bottom of the swing away mount using two bolts.








Step 19

• Remove the front armpad fixing bolt.

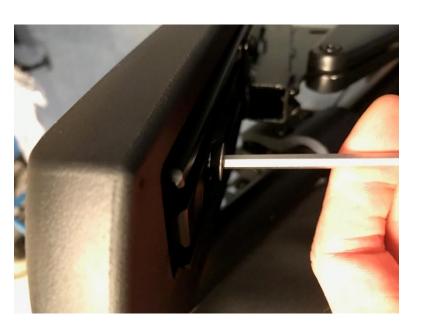





Step 20

• Slide swing away mount into the channels under the armpad and replace the armpad fixing bolt.





Step 21

 Secure the fixing bolts into the channel nuts. It is easier to remove the swing away section to access the bolts. Once tightened, refit the swing away mount.








Step 22

Remember to fit the bolt back into the bottom.

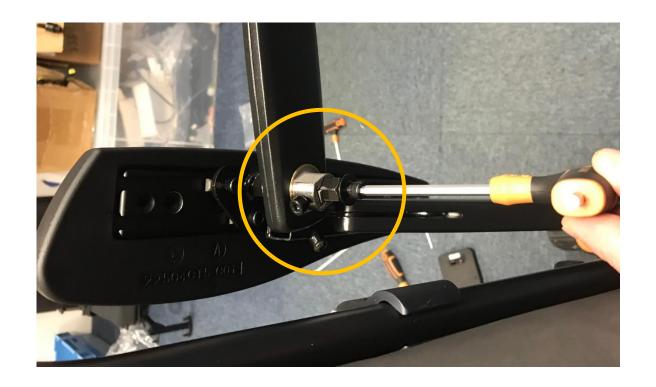




Step 23

• Take one of the Link-It base module and fit on to Hexagon adapter.



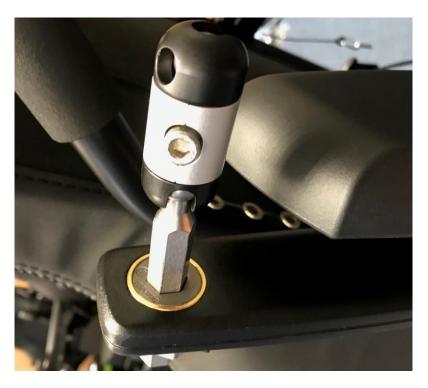



Step 24

 Fit the connecting rod into the base module and fit the second base module to the connecting rod.








Step 25

 Take the Omni 2 with adapter bracket and fit to the top base module. You can now position the Omni 2 and tighten the bolts in the base modules.




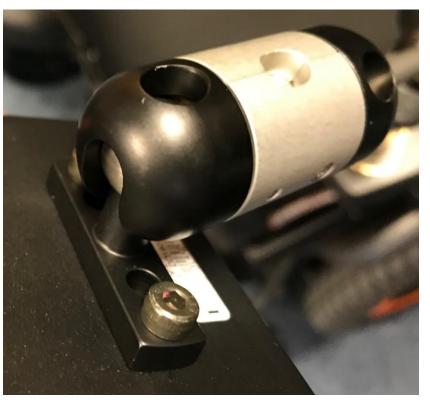



Step 25 cont....

• Take the Omni 2 with adapter bracket and fit to the top base module. You can now position the Omni 2 and tighten the bolts in the base modules.

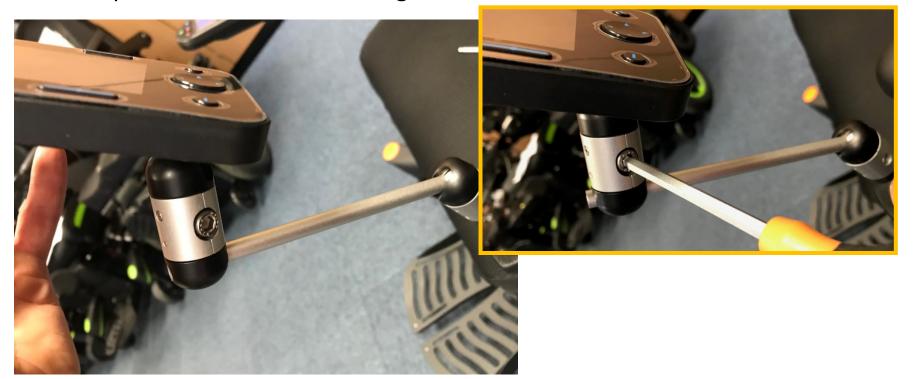



Step 25 cont.....

 Take the Omni 2 with adapter bracket and fit to the top base module. You can now position the Omni 2 and tighten the bolts in the base modules.





Step 26

 Now take the 250cm connecting loom and connect to the Input Section in the Display port marked DISP.





Step 27

• Take the Omni 2 Display connecting cable and connect to the Omni 2 display.







Step 28

Run the cable along the inside of the armrest.





Step 29

Tidy the cable with Velcro strips and clips.









Step 29 cont.....

Secure the cable to the backposts





Step 30

• Tidy the cables in the backpack with Velcro loops.





Step 31

 Run the 150cm bus. cable through the space in front of the rear seat height brackets and secure with cable tie. Connect to Omni 2 bus. cable.






Step 32

• Turn on the power on the Omni 2 display module. The system will automatically configure for the new Omni 2 Module. Cycle the power when prompted.





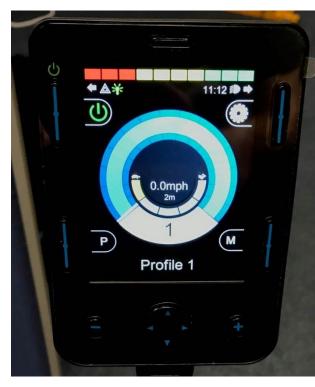



Step 33

• Ensure all cables are tidy and the backpack is zipped up.

