

Omni 2 – Sedeo Pro

Retro Fitting Help Guide





Parts Required:

Electronics

Omni 2 Kit – 20011242 (includes Input Section, Display Screen, 250cm connecting cable)

Bag Mounting

- Backpack 20009190-010
- R-Net Bus. Cable 20011035
- Fixing Bracket 22509144

Joystick Mounting (Left and Right)

- JSM Swing Away Mount 20009252
- JSM Fixed Mount 20009251



Parts Required:











Step 1

• Open the Omni 2 backpack so you can see the holes in the metal plate inside.





Step 2

• Use a drill with a 5mm bit to drill holes through the fabric





Step 3

• Drill the holes in positions shown below.





Step 4

Remove the 4 bolts that secure the backrest mounting brackets to the channels

in the seat frame. Be careful not to lose the channel nuts.







Step 5

• Remove the backrest completely as this makes the job easier.





Step 6

 Attach the top backpack mounting bracket to the backrest mounting plates with 4 bolts in the orientation show below.







Step 7

This is how it should look once fixed. Don't over tighten the bolts at this point.





Step 8

• Fix the lower bracket in the same way and in the same orientation.





Step 9

 This is what it should look like once fitted. Before tightening the bolts push the brackets high on the back post channels then tighten.






Step 10

• Fix the bag to the bracket using 4 small screws, washers and nuts. The nuts

secure on the inside of the bag.



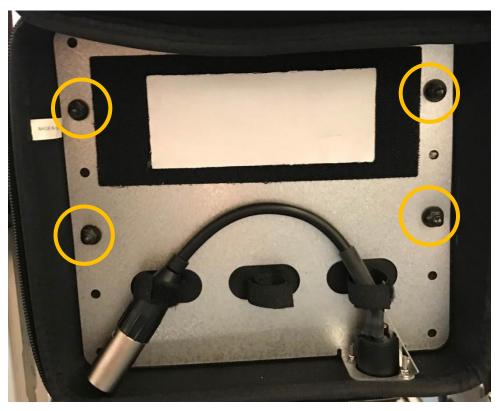



Step 11

• This is how the backpack should look once fitted.





Step 12

• Remove the Velcro pad from inside the backpack.





Step 13

• Take the Input Module and stick the Velcro pad centrally onto the back.





Step 14

• Fix the Input Module to the Velcro pad inside the backpack. Leave enough room to connect the R-Net Bus. loom on the left hand side.





Step 15

Take the Omni mounting bracket (Fixed or Swing away). Remove the standard

joystick mounting bracket.







Step 16

Fix the Omni 2 mounting piece to the swing away mount. Secure with fixing bolt.





Step 17

• Fit 2 channel nuts to the bottom of the swing away mount using two bolts.








Step 18

• Remove the front armpad fixing bolt.

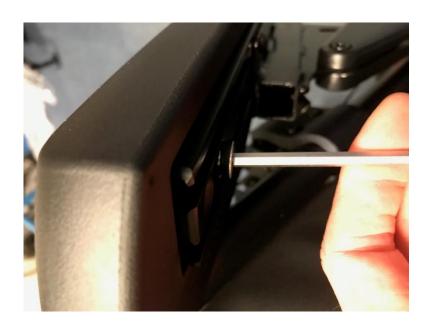





Step 19

• Slide swing away mount into the channels under the armpad and replace the armpad fixing bolt.





Step 20

• Secure the fixing bolts into the channel nuts. It is easier to remove the swing away section to access the bolts. Once tightened, refit the swing away mount.








Step 21

Remember to fit the bolt back into the bottom.

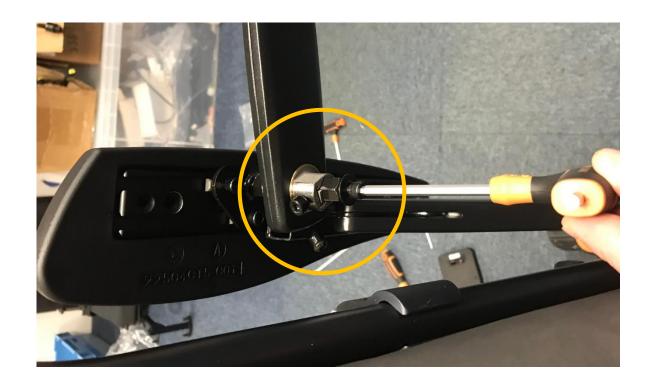




Step 22

• Take one of the Link-It base module and fit on to Hexagon adapter.



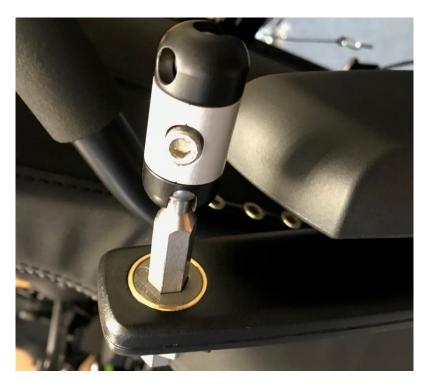



Step 23

 Fit the connecting rod into the base module and fit the second base module to the connecting rod.








Step 24

 Take the Omni 2 Display Module and fix the Link-It adapter bracket with 2 small bolts.





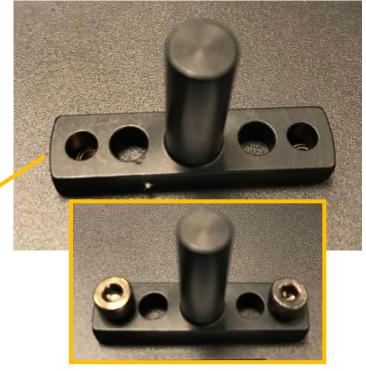



Step 25


• Fix the Omni 2 Display to the top Link-It base module.





Step 26

 Position the Omni 2 Display and tighten the Link-It base module with a 5mm Allen Key.

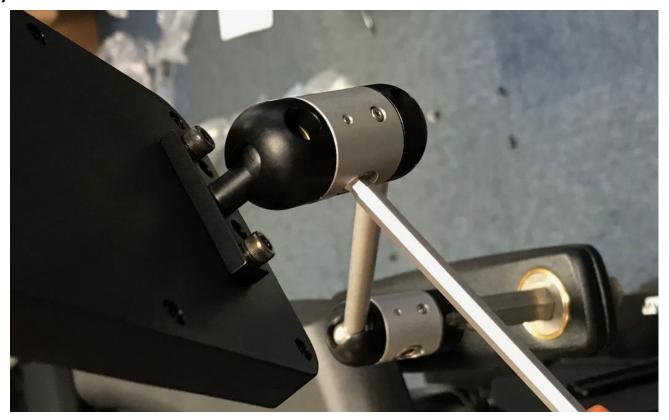



Step 27

• Take the Omni 2 display connecting cable and plug one end into the DISP port on the Input Module in the backpack.








Step 28

 Connect the other end of the connecting cable to the port in the bottom of the Omni 2 Display Module.

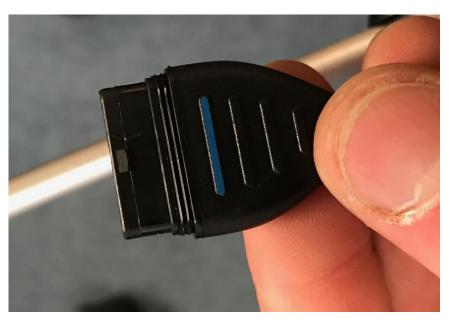





Step 29

Connect the 30cm R-Net bus. cable to the port on the left side of the Omni 2

input module.







Step 30

 Use the cable tidy clips to secure the connecting cable to the Link-It connecting rod.





Step 31

• Tidy the connecting cables using clips and Velcro. Loop any excess connecting cable using the Velcro in the backpack.







Step 32

 Plug the charging cable into the port on the right hand side of the Omni 2 Input Module.





Step 33

Connect the Omni 2 Input Module into the R-Net bus. system.

